



SMARTLOCK USER MANUAL

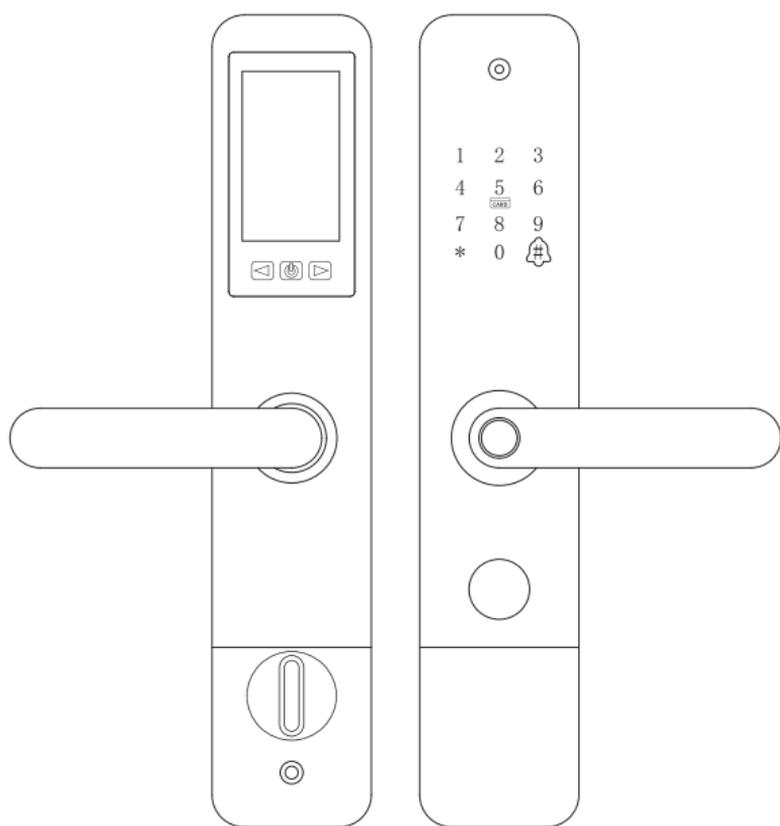

ⓘ Notice

For security, please set the administrator password immediately and put the keys in a safe place outside after installation.

1.Product Diagram

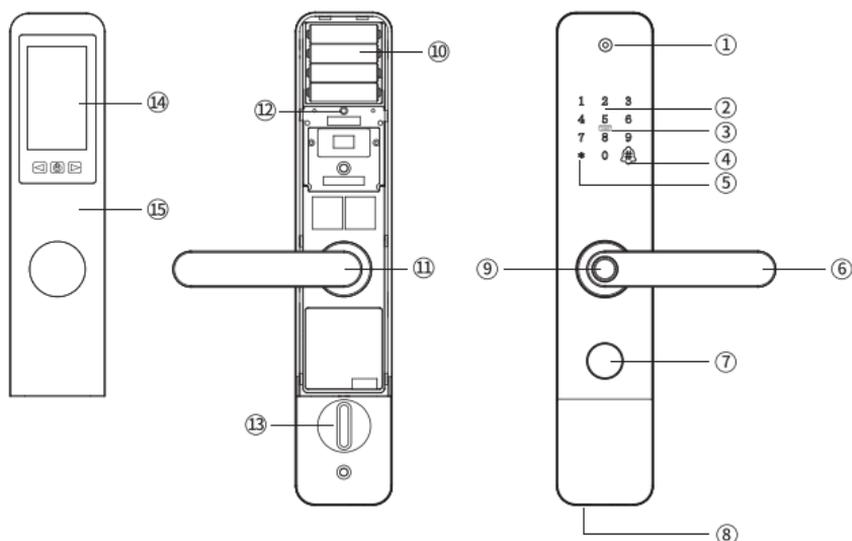

- ① Camera
- ② Touch Key Area
- ③ Swipe Card Area
- ④ Confirm Key + Doorbell
- ⑤ Return Key
- ⑥ Outer Handle
- ⑦ Keyhole
- ⑧ USB
- ⑨ Fingerprint Collection Area
- ⑩ Battery compartment
- ⑪ Inner Handle
- ⑫ Set Key
- ⑬ Locking Knob
- ⑭ HD Screen
- ⑮ Battery Cover

▲ Notice The pictures of installation instruction are for reference only. The actual product shall prevail.

2.Product List

Serial Number	Name	Quantity
1	Front Panel	1
2	Rear Panel	1
3	AA Battery	4
4	Accessories Package	1
5	IC Card	2
6	Specification	1
7	Warranty Card	1
8	Bore Hole Drawing	1
9	Lock Cylinder	1
10	Key	2

3. Product Introduction

Fingerprint	Number: 100
Password	Number: 100; 6-10 bits; Anti-snooping Virtual Password Function
IC Card	Number: 100; 2 pcs
Guidance	The whole navigation is prompted by voice.
Power	4 AA Battery; USB
Administrator	Fingerprint; Password; IC Card
Other Functions	Trial and Error Freezing; Low Power Warning
Factory Condition	In the factory condition, the database is empty. The initial password is 123456.
Initialization Setting	Simultaneously press and hold the switch lock button of the rear lock for about 10 seconds, and it will announce "Initialization is successful".

4. System Setting

4.1 Add Administrator

In the initialization state, press "1#" → Verify administrator (the initial administrator is 123456) → Enter the first administrator information and press "#" to confirm.

Next time you want to add administrator information → Press "1#" → Verify administrator (The fingerprint/password/card you have added) → Enter the fingerprint/password/card according to the voice prompt.

4.2 Add Regular User

Press "2#" → Verify administrator (The fingerprint/password/card you have added) → Enter the fingerprint/password/card according to the voice prompt.

4.3 Delete User

Press "4#" → Verify administrator (The fingerprint/password/card you have added) → Enter the user information to be deleted (fingerprint/password/card) and press "#" to confirm.

▲ Notice The initial administrator number is 001. The administrator cannot be deleted here and must be restored to factory settings. The administrator number 002-010 can be deleted. The administrator which enter the menu can not be deleted.

4.4 Date Time Set

Press "8#" → Verify administrator (The fingerprint/password/card you have added) → Enter the correct time according to the voice prompt, and press "#" to confirm.

4.5 Tamper Alarm

Press "01#" → Verify administrator (The fingerprint/password/card you have added) → Switch the state (On/Off).

4.6 Free Passenger Mode

Press "5#" after unlock → Free passenger mode is on.
Unlock one more time → Free passenger mode is off.

4.7 Volume

Press "21#" → Verify administrator (The fingerprint/password/card you have added) → Select "0" for off; "1" for low; "2" for medium; "3" for high.

4. System Setting

4.8 Double Verify

Press "31#" → Verify administrator(The fingerprint/password/card you have added) → Select "1" for single verify; "2" for double verify.

4.9 Initialization Setting

Press "888#" → Verify administrator(The fingerprint/password/card you have added) → Initialization is successful.

4.10 System Query

Press "51#" → Verify administrator(The fingerprint/password/card you have added) → Select "2" to turn the page up; select "5" to turn the page down.

4.11 Language

Press "8899"+"code"+"#"

Code:

- 11 English
- 12 Portuguese
- 13 Spanish
- 14 French
- 15 Arabic
- 16 Indonesian
- 17 Vietnamese
- 18 Chinese
- 19 Thai

5. Method of Application

5.1 Common Mode

5.1.1 Fingerprint

Input the added information of fingerprint → Fingerprint verification is successful → Announce "Door' s opened".

5.1.2 Password

Input the added password and press the "#" key to confirm → Password verification is successful → Announce "Door' s opened".

5.1.3 IC Card

Input the added IC card → IC card verification is successful → Announce "Door' s opened".

5.2 Emergency Opening Methods

5.2.1 Mechanical Key

In case of emergency such as power depletion or system failure, spare mechanical key can be used to open the lock.

- ① Open the front panel keyhole cover.
- ② Insert the mechanical key into the spare mechanical keyhole.
- ③ Turn the key to open the lock.

5.2.2 USB

When the battery is exhausted and there is no key, the external power supply can be plugged and used, without waiting for the battery to charge, just open the door according to the normal steps.

5. Method of Application

5.3 Other Unlocking/Locking

5.3.1 Mechanical Handle Unlocking Inside

Rotating mechanical handle to unlock when you want to go outside.

5.3.2 Mechanical Handle Locking Inside and Outside

Lift up the handle to make the latch extend out to lock.

5.3.3 Back Locking Inside

Turning the lock knob inside the door can add a back locking in the locked state.

5.4 Battery Power Detection

When the battery voltage is lower than 4.8V, it also can be identified normally. However, the voice message "Insufficient battery, please change in time" is displayed first when you use it each time.


▲ Notice When the battery is low, please change it in time to avoid shutting down after the battery runs out.

5.5 When unauthorized unlocking information is incorrectly entered for 3 times consecutively, the system will lock for a minute.

5.6 Virtual password protection function: When opening the door, enter the password as follows: XXX password XXX; That is, add some irrelevant codes before and after the password, and press the "#" key to confirm. The password must be included in the input.


6. Network Operation

① Search "Tuya" App in the App Store, download and register.

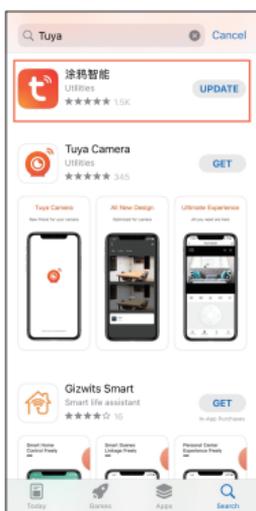


6. Network Operation

②Click "+" and "Add Device" at the upper right corner of the interface to enter the option of "Camera & Lock" and select "Lock(Wi-Fi)".

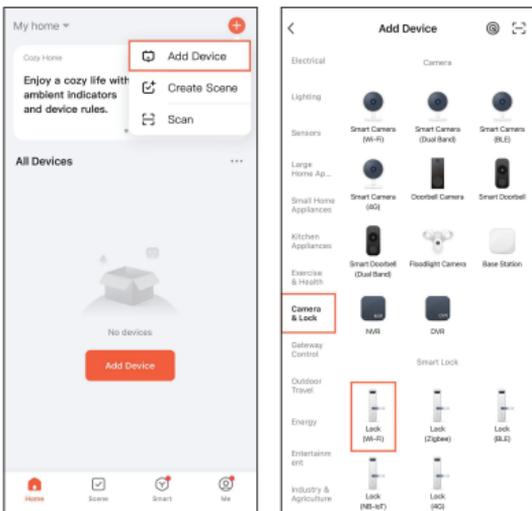


③Select 2.4 GHz Wi-Fi Network and enter the password.

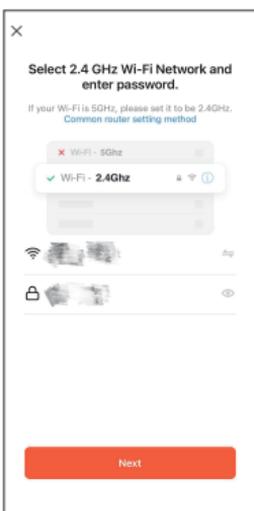

④Start the operation of the door lock section. Press "9#" and verify the administrator information (fingerprint/password/card) recorded before.


⑤Enter the "Reset the Device" screen, click "Confirm the indicator is blinking rapidly", then select "AP Mode". Select "Go to Connect", access "WLAN setting", select "SmartLife-xxxx". Return to Tuya App.

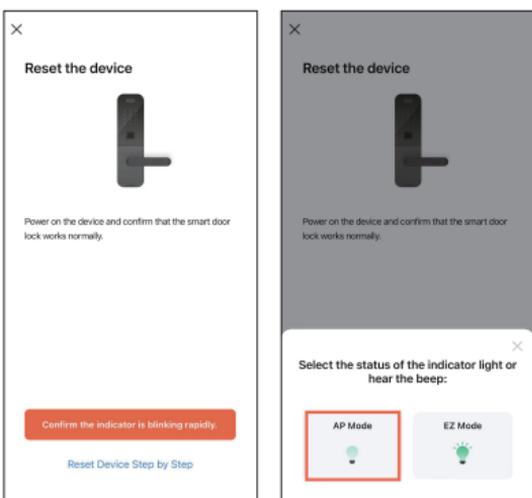


6. Network Operation



⑥ Wait for the network connection.

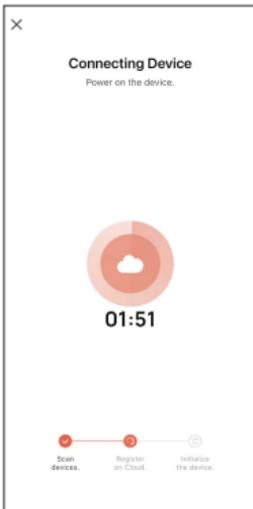


⑦ Device added successfully. Click "Done". If a device fails to be added and cannot be found, reset the device and add it again.

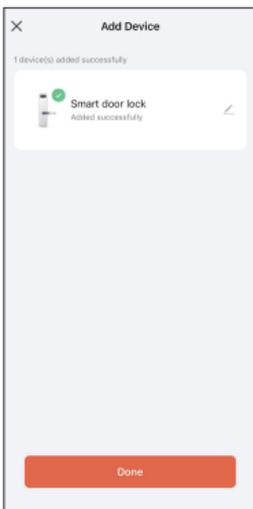

6. Network Operation

⑧ The smart lock details screen is automatically displayed.

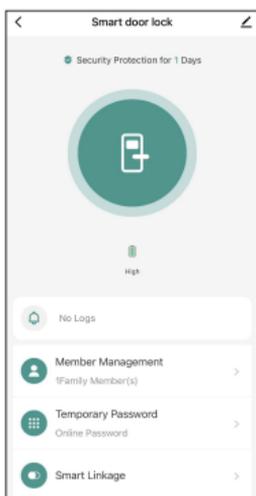

⑨ Remote unlocking: Press the doorbell to trigger the remote unlocking, and the App will receive the message to confirm the unlocking.

